 


# Bauer NE

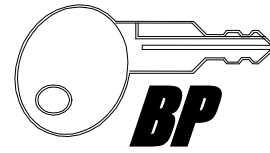 


**Bauer Products, Inc.**  
702 Evergreen St SE  
Grand Rapids, MI 49507  
1-866-68-BAUER(22837)  
[www.bauerproducts.com](http://www.bauerproducts.com)  
email: info@bauerproducts.com

## Quick Reference Card

Please see our website at [www.bauerproducts.com](http://www.bauerproducts.com) for detailed instructions, and videos on installation and operation.

## Bauer NE Operation

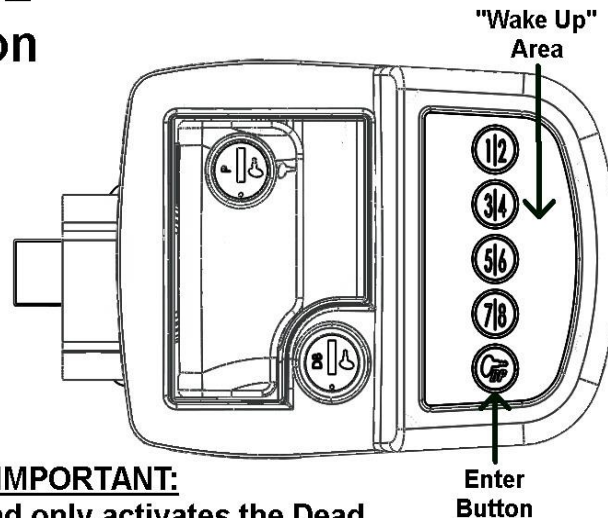

1. Touch the area next to the Buttons to "Wake Up" the lock.
2. The Buttons will illuminate when the lock is "awake" and ready to accept the code.
3. The factory default code is activated by touching the 3,7,1,5 Buttons followed by the Enter Button.
4. To program your Personal Code touch and hold the "3|4" Button and Enter Button for 2 seconds. The lock will beep 3 times indicating it is ready to accept a new code. Enter a 4 digit code followed by the Enter Button. The lock will beep 4 times to indicate a new code has been entered. The first time the new 4 digit code is entered there will be a long beep indicating the new code is accepted. The new code can be entered now and will activate the dead bolt.

**IMPORTANT:**  
The Touch Pad only activates the Dead Bolt. The Paddle Lock is Master Keyed for Dealer and Service Center use. The Dead Bolt provides Maximum Security

Please enter your Personal Code upon installation of NE to prevent inadvertent programming.

## Battery Installation

- 
1. Loosen (2) 6x32 Screws. These screws will not come apart from the Battery Compartment Lid.
  2. Remove Battery Compartment Lid and install (4) fresh AA Batteries according to the Battery Orientation Symbols. Make sure batteries are touching the contacts.
  3. Install Battery Compartment Lid by aligning the (3) Tabs and (3) Tab Slots.
  4. Tighten the (2) 6x32 Captured Screws to secure the Battery Compartment Lid into place.

# Bauer NE Installation

Inside Plate Assembly

(4) 8x32 Oval Head Screws

7. Align Red Dots on Dead Bolt Knob and Inside Plate and Install (4) 8x32 Oval Head Screws

5. Plug wire from Inside Plate Assembly into Receptacle

6. Tuck the Battery Wires in this pocket

1. Remove Existing Lock

2. Clean Cut-Out of Debris

3. Insert Bauer NE Housing with Dead Bolt in the unlocked position into Door Cut-Out as shown

4. Attach (2) 8x32 flat head screws to hold housing to door edge

 
Dead Bolt Knob is in Unlocked Position

Door

## Battery Plug Instructions

1. Align Tab with Small Square Slot in Receptacle

2. With Plug Aligned Insert into Receptacle until click is heard

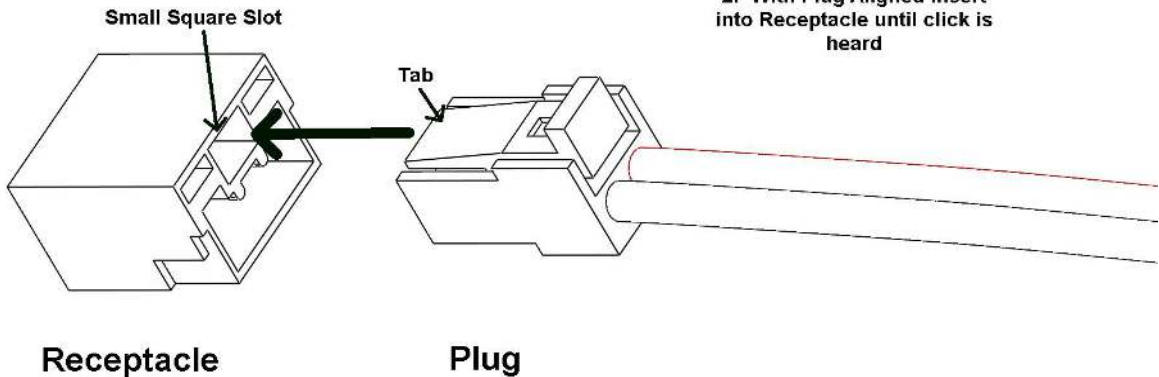

## **Limited Warranty**

BAUER'S WARRANTY IS LIMITED. AT ITS SOLE DISCRETION, BAUER MAY EITHER REPLACE OR REPAIR ANY DEFECTIVE PARTS. IN NO EVENT SHALL BAUER HAVE ANY LIABILITY TO CUSTOMER FOR PAYING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES INCLUDING (WITHOUT LIMITATION) DAMAGES RESULTING FROM PERSONAL OR BODILY INJURY OR DEATH OR DAMAGES TO, OR LOSS OF USE OF, ANY PROPERTY. NOTWITHSTANDING ANY PROVISION TO THE CONTRARY, THIS LIMITED WARRANTY IS MADE UPON THE EXPRESS UNDERSTANDING THAT IT SHALL APPLY IN CONNECTION WITH THE SALE OF THE PRODUCT BY BAUER AND IS IN LIEU OF ALL OTHER WARRANTIES (EXPRESS, IMPLIED OR STATUTORY) INCLUDING THE SEPARATE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE OR USE.